

BB

CRANKSHAFT, CAMSHAFT AND GEARSCard 1

400	CRANKSHAFT with oil thrower & plugs	1	1A 1502	CEASED FROM ENG. 7884 MAR '38 - 420
401	Key	1	2H 326	
403	STARTING NUT	1	1A 463	
404	Lockwasher	1	2H 2	
406	Crankshaft Gear	1	1A 1547	
407	CAMSHAFT	1	1A 1505	
408	Thrust button	1	1F 48	CEASED FROM ENG. 516 JULY 1937 - 409
409	Thrust button. (From Eng. 516) (18627)	1	1A 1647	
410	DRIVING CHAIN for camshaft	1	2H 735	
412	Camshaft Gear	1	1A 1548	1A 1956
413	Setscrews, gear to camshaft	2	2K 5265	
414	Lockwasher	1	1F 49	
416	Distributor driving spindle	1	1G 58	
417	Peg for spindle	1	2K 2163	

BB

Card 2

400

420 crankshaft with oil thrower & plugs (21105) 1 1A. 1694

MARCH 1938 FROM ENG. 7884

BIG 7.

C R A N K S H A F T

BB.

	Previous type from commencement. List 1598.A.	Housing embodied in Crankcase. From Engine 7884 March 1938
Crankshaft	1A 1502 (pages 7 and 8)	1A 1694
Flywheel bearing housing	1A 1560 (pages 33 and 34)	not required

12th. April 1938. C.B.K. 21105

BIG SEVEN.

THRUST BUTTON FOR CAMSHAFT.

BB.

	First Type.	From Engine 516 (July 1937.)
Camshaft	1A.1505 together with Thrust Button 1A.1647	1A.1505
Thrust Button	1F.48	1A. 1647

8th. September 1937. 18627. C.B.K.